


Manual

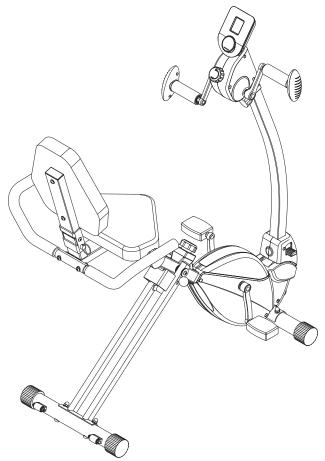

Product May Vary Slightly From Pictured.

CAUTION:

Weight on this product should not exceed 250 lbs.

This Product is Distributed Exclusively by



2040 N Alliance Ave, Springfield, MO 65803 **Customer Care** 1 (800) 375-7520 www.staminaproducts.com

WARNING

Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are securely tightened prior to each use. Follow all safety instructions in this manual.

When calling for parts or service, please specify the following numbers:

Model#: 15-0340A

S/N:				
				-

STAMINA PRODUCTS **MADE IN CHINA**

©2020 Stamina Products, Inc. 2020, 12

MO PIAN

Smart Audio Workouts for Your Bike



Go to the App Store on your device or scan the QR Code for quick access.





Download the app and get moving! Assembly video included in app.

TABLE OF CONTENTS

Safety Instructions 3	Maintenance 1	16
Before You Begin 5	Conditioning Guidelines 1	17
Equipment Warning, Caution & Notice Labels 6	Warm-Up and Cool-Down 1	18
Hardware Identification Chart 7	Warranty 1	19
Assembly Instructions 8	Product Parts Drawing 2	20
Set Up Instructions 12	Parts List	21
Operational Instructions 13	Fax/Mail Ordering Form 2	23
Storage 16	-	

SAFETY INSTRUCTIONS

↑ WARNING Cancer and Reproductive Harm www.P65Warnings.ca.gov

MARNING Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

A WARNING To reduce the risk of serious injury, read the following Safety Instructions before using the STAMINA® Recumbent Exercise Bike.

- 1. Save these instructions and ensure that other exercisers read this manual prior to using the STAMINA® **Recumbent Exercise Bike** for the first time.
- 2. Read all warnings and cautions posted on the STAMINA® Recumbent Exercise Bike.
- 3. The STAMINA® Recumbent Exercise Bike should only be used after a thorough review of the Owner's Manual. Make sure that it is properly assembled and tightened before use.
- 4. We recommend that two people be available for assembly of this product.
- 5. Keep children away from the STAMINA® Recumbent Exercise Bike. Do not allow children to use or play on the STAMINA® Recumbent Exercise Bike. Keep children and pets away from the STAMINA® Recumbent Exercise Bike when it is in use.
- 6. The STAMINA® Recumbent Exercise Bike is not a freewheeling exercise bike; therefore, pedal speed should be reduced in a controlled manner to prevent injury from spinning pedals.
- 7. It is recommended that you place this exercise equipment on an equipment mat.
- 8. Set up and operate the STAMINA® Recumbent Exercise Bike on a solid level surface. Do not position the STAMINA® Recumbent Exercise Bike on loose rugs or uneven surfaces.
- 9. Make sure that adequate space is available for access to and around the STAMINA® Recumbent Exercise Bike.
- 10. Keep fingers clear of all pinch points when folding and unfolding the STAMINA® Recumbent Exercise Bike.
- 11. Before using, inspect the STAMINA® Recumbent Exercise Bike for worn or loose components, and securely tighten or replace any worn or loose components prior to use.
- 12. Each user should adjust the seat per instructions on page 13.
- Do not attempt to adjust the seat while you are on the STAMINA® Recumbent Exercise Bike.
- 14. Make sure the Table Post(4) and Seat Frame(6) is locked properly by the Adjustment Knobs(33, 36).
- 15. Make sure the Rear Frame(2) is locked properly by the Ball Pin(40) when in storage.
- 16. Consult a physician prior to commencing an exercise program and follow his/her recommendations in developing your fitness program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
- 17. Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them. Always use common sense when exercising.
- 18. Do not wear loose or dangling clothing while using the STAMINA® Recumbent Exercise Bike.
- 19. Never exercise in bare feet or socks; always wear proper footwear such as running, walking, or cross training shoes that fit well, provide foot support, and feature non-skid rubber soles.
- 20. Be careful to maintain your balance while using, mounting, dismounting, or assembling the STAMINA® Recumbent Exercise Bike, loss of balance may result in a fall and serious bodily injury.
- 21. The **STAMINA® Recumbent Exercise Bike** should not be used by persons weighing over 250 pounds.
- 22. The STAMINA® Recumbent Exercise Bike should be used by only one person at a time.
- 23. The STAMINA® Recumbent Exercise Bike is for consumer use only. It is not for use in public or semipublic facilities.

EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE. REGISTER YOUR PRODUCT.



NEED HELP? CONTACT US FIRST 1 (800) 375-7520

customer.care@staminaproducts.com

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

With your body in mind,

Stamina Customer Care

To enact your extended warranty and to help us better serve you, please **go online** and register your new product.

register.staminaproducts.com

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



customer.care@staminaproducts.com www.staminaproducts.com



1 (800) 375-7520



FAX (417) 889-8064



MAIL Stamina Products, Inc. ATTN: Customer Care 2040 N Alliance Ave Springfield, MO 65803

BEFORE YOU BEGIN

Thank you for choosing the **STAMINA®** Recumbent Exercise Bike. We take great pride in this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The **STAMINA® Recumbent Exercise Bike** provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See the next page for an image of the serial decal. Model number and serial number are required when


calling for assistance.

Read this manual carefully before using the **STAMINA® Recumbent Exercise Bike.**

Providing you with a quality product is Stamina's top priority. However, sometimes there could be a missing or incorrectly sized part. If you have any questions or problems with the parts included with your **STAMINA® Recumbent Exercise Bike**, please do not return the product. Contact us FIRST!

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on staminaproducts.com. Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

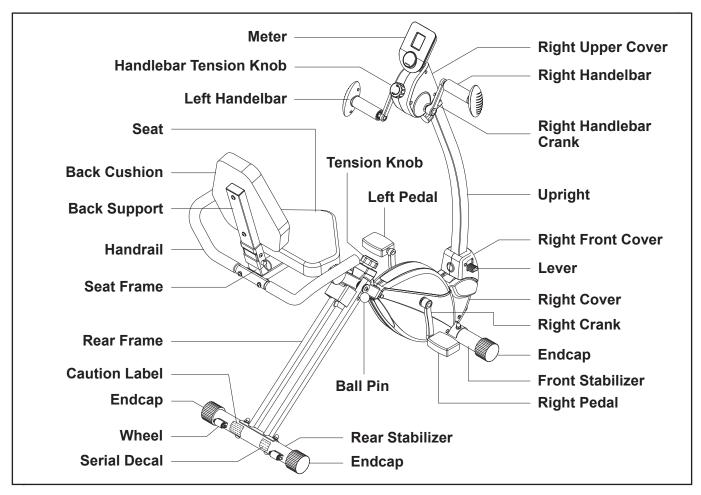

THE FOLLOWING TOOLS ARE INCLUDED FOR ASSEMBLY:



Combination Wrench

Allen Wrench (5mm) w/ Screwdriver

EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the **STAMINA® Recumbent Exercise Bike.** Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

WARNING LABEL(56)

ACAUTION

For consumer use only. Failure to follow all warnings and instructions could result in injury or property damage. Before assembling or using this product, read and follow the Owner's Manual and all other warnings and instructions that accompany this product. Replace this caution label if damaged, illegible, or removed.

Keep others including children & pets away from equipment when in use.

Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35 or have any pre-existing health condition. Always make sure all nuts and bolts are securely tightened before using this product. This product should not be used by person weighing more than 250 lbs. unless otherwise stated in your Owner's Manual.


SERIAL DECAL(129)



To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.

HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the hardware used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

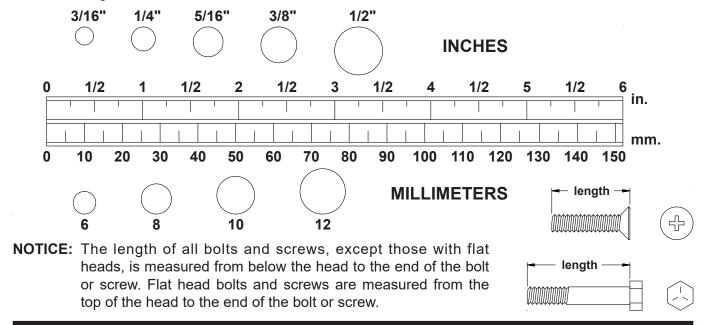

After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.

Par	t Number and Description	Qty
63	Carriage Bolt (M8 x 1.25 x 65mm)	4
65	Bolt, Button Head (M8 x 1.25 x 40mm)	4
66	Bolt, Button Head (M8 x 1.25 x 20mm)	4
72	Screw, Round Head (M6 x 1 x 12mm)	1
98	Bolt, Button Head (M8 x 1.25 x 80mm)	1
77	Acorn Nut (M8 x 1.25)	4
78	Arc Washer (M8)	6
79	Washer (M8)	8
80	Nylock Nut (M8 x 1.25)	1

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to staminaproducts.com under the Customer Care section and order the part needed, e-mail us at customer.care@staminaproducts.com, or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.

STEP 1


Refer to illustration below. Unfold the **REAR FRAME(2)** away from the **MAIN FRAME(1)**. Lock the frame assembly in unfolded position by inserting the **BALL PIN(73)** into the upper hole in the **REAR FRAME(2)**.

STEP 2

Attach the REAR STABILIZER(8), the one with WHEELS(23), to the REAR FRAME(2) with the wheels facing backward. Secure with CARRIAGE BOLTS(M8x1.25x65mm)(63), ACORN NUTS(M8x1.25)(77), and ARC WASHERS(M8)(78).

STEP 3

Attach the FRONT STABILIZER(4) to the MAIN FRAME(1) with CARRIAGE BOLTS(M8x1.25x65mm) (63), ACORN NUTS(M8x1.25)(77), and ARC WASHERS(M8)(78).

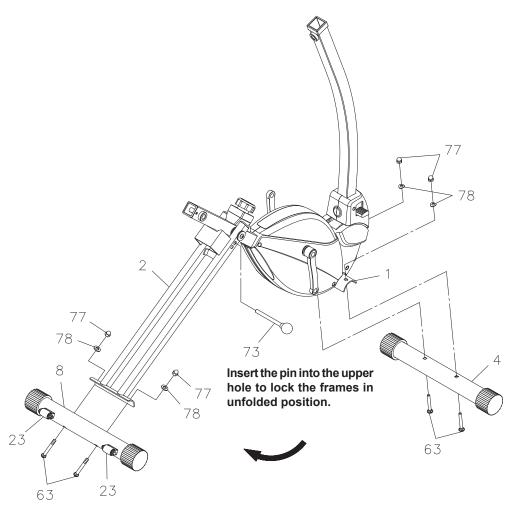

STEP 4

Attach the SEAT(26) to the SEAT FRAME(5) with BUTTON HEAD BOLTS(M8x1.25x20mm)(66) and WASHERS(M8)(79). Insert the SEAT FRAME(5) into the MAIN FRAME(1) and secure with the ADJUSTMENT KNOB(99).

NOTE: Make sure that the pin on the ADJUSTMENT KNOB(99) is inserted into one of the holes in the SEAT FRAME(5). The ADJUSTMENT KNOB(99) should be screwed in tight to make the SEAT FRAME(5) fit securely in the MAIN FRAME(1).

STEP 5


Attach the HANDRAIL(7) to the SEAT FRAME(5) with BUTTON HEAD BOLTS(M8x1.25x40mm)(65) and ARC WASHERS(M8)(78).

STEP 6

Attach the BACK SUPPORT(6) to the SEAT FRAME(5) with BUTTON HEAD BOLT(M8x1.25x80mm) (98), WASHERS(M8)(79), and NYLOCK NUT(M8x1.25)(80). Lock the BACK SUPPORT(6) in the upright position with the PULL PIN(60).

STEP 7

Attach the BACK CUSHION(27) to the BACK SUPPORT(6) with BUTTON HEAD BOLTS(M8x1.25x40mm) (65) and WASHERS(M8)(79).

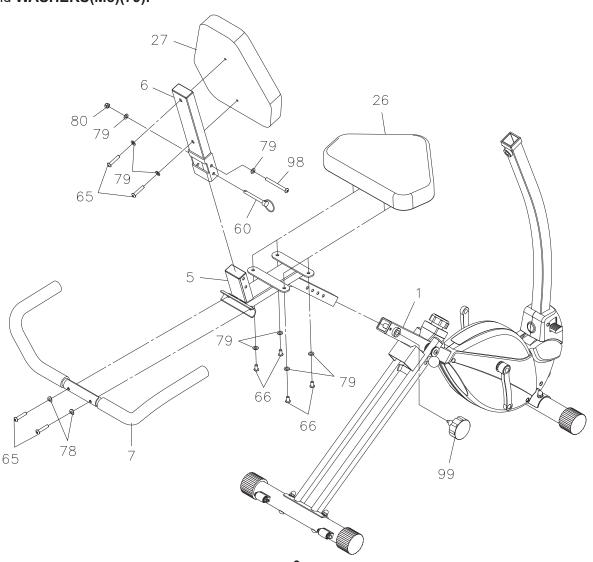

STEP 8

NOTE: The RIGHT PEDAL(30) has an R stamped on the end of the pedal shaft. The RIGHT PEDAL(30) has right hand threads and is tightened by turning clockwise. The LEFT PEDAL(29) has an L stamped on the end of the pedal shaft. The LEFT PEDAL(29) has left hand threads and is tightened by turning counterclockwise.


Thread the RIGHT PEDAL(30) to the RIGHT CRANK(44) as shown. Tighten the pedal securely. Refer to the detail view below. The shoulder of the PEDALS(29, 30) should be in contact with the CRANKS(43, 44) when securely tightened.

Repeat on the left side in order to attach the LEFT PEDAL(29) to the LEFT CRANK(43).

STEP 9

Install Handlebar Assembly by inserting the HANDLEBAR POST(100) into the UPRIGHT(3) and secure with the SMALL ADJUSTMENT KNOB(59). Bolt the ROUND HEAD BOLT(M6x1x12mm)(72) into the UPRIGHT(3) for security.

NOTE: Make sure that the pin on the SMALL ADJUSTMENT KNOB(59) is inserted into one of the holes in the HANDLEBAR POST(100). The SMALL ADJUSTMENT KNOB(59) should be screwed in tight to make the HANDLEBAR POST(100) fit securely in the UPRIGHT(3).

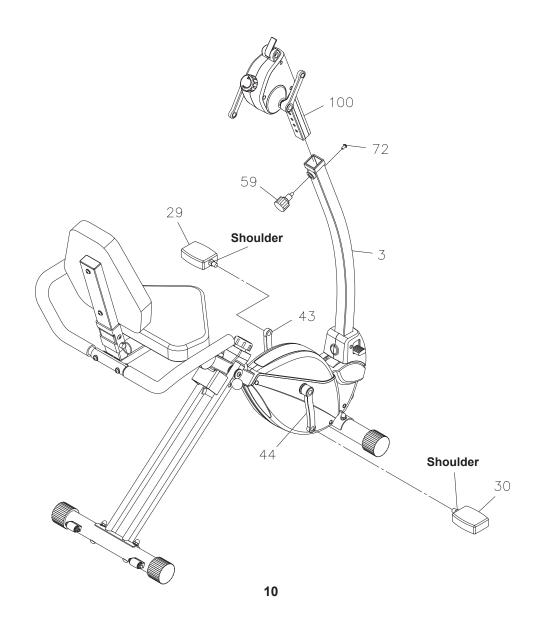


STEP 10

NOTE: The RIGHT HANDLEBAR SHAFT(107) has an R stamped on the end of the handlebar shaft. The RIGHT HANDLEBAR SHAFT(107) has right hand threads and is tightened by turning clockwise. The LEFT HANDLEBAR SHAFT(114) has an L stamped on the end of the pedal shaft. The LEFT HANDLEBAR SHAFT(114) has left hand threads and is tightened by turning counterclockwise.

Attach the HANDLEBAR (118) to the right side by threading the RIGHT HANDLEBAR SHAFT (107) to the RIGHT HANDLEBAR CRANK (113) and tighten securely. The shoulder of the HANDLEBAR SHAFTS (107, 114) should be in contact with the HANDLEBAR CRANKS (112, 113) when securely tightened. Repeat on the left side in order to attach the other HANDLEBAR (118) to the LEFT HANDLEBAR CRANK (112).

STEP 11

Install two AAA batteries into the **METER(124)**, the batteries are not included. See page 12 for detailed battery installation instructions. Insert the **METER(124)** onto the **METER PLATE(121)**. Refer to the detail view. Connect the **UPPER SENSOR WIRE(123)** to the short connecting wire of the **METER(124)**. Plug the Coil Connection Wire of the **METER(124)** into the socket of the **SENSOR WIRE(51)** which located at the front of the **UPRIGHT(3)**.

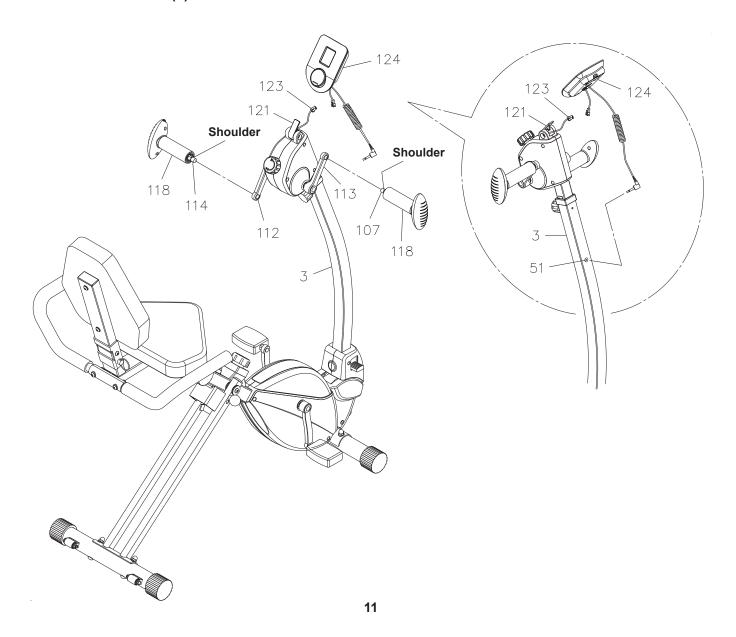


SET UP INSTRUCTIONS

Place the **STAMINA®** Recumbent Exercise Bike in the area where it will be used. It is recommended that the **STAMINA®** Recumbent Exercise Bike be placed on an equipment mat. The maximum operation dimensions of the **STAMINA®** Recumbent Exercise Bike are approximately 51.6 inches long x 24.8 inches wide x 54 inches tall. (These dimensions may vary up to one inch.) An area 4 feet wide x 6 feet long is required for safe operation of the **STAMINA®** Recumbent Exercise Bike. Make sure that adequate space is available for access to and passage around the **STAMINA®** Recumbent Exercise Bike.

LEVELING: Adjust the location of **STAMINA® Recumbent Exercise Bike** so the bike sits on the floor without rocking.

MOVING: The STAMINA® Recumbent Exercise Bike has a pair of WHEELS(23) on the REAR STABILIZER(8). Hold the HANDRAIL(7) and tilt back on WHEELS(23) to move the STAMINA® Recumbent Exercise Bike.

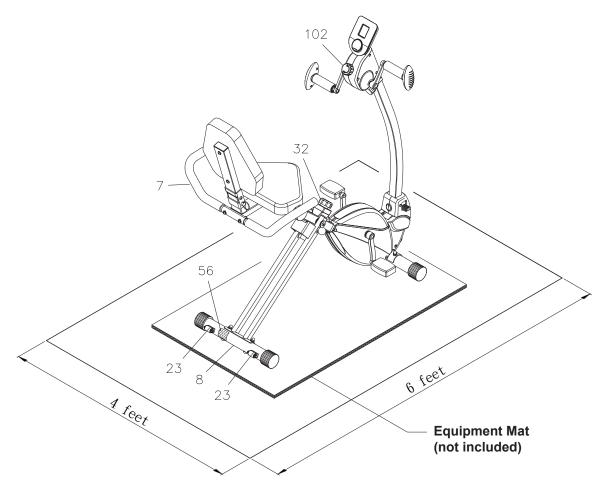

FUNCTION INSPECTION:

Visually inspect the **STAMINA® Recumbent Exercise Bike** to verify that assembly is as shown in the above illustration. Check the function of the **STAMINA® Recumbent Exercise Bike** by turning the pedals slowly through one complete revolution to verify that the drive train functions properly. Adjust the **TENSION KNOB(32)** and verify that it functions properly and the resistance changes. Use the same procedure to inspect the function of the handlebar.

CAUTION: Locate and read the CAUTION LABEL(56) on the STAMINA® Recumbent Exercise Bike.

Make sure that all users read the CAUTION LABEL(56) before using the product.

OPERATIONAL INSTRUCTIONS

USING THE FITNESS METER

POWER ON: Move the handlebar, begin pedaling, or press any button.

POWER OFF: Automatically shuts off after 4 minutes of inactivity.

ENTER SETTING MODE:

Stop pedaling for four seconds to enter setting mode.

FUNCTION BUTTONS:

MODE/ In the setting mode, press and release to select each function

RESET: for preset target values for TIME, DISTANCE, and CALORIES. Press and release to select functions for display for DISTANCE, CALORIES, RPM, and ODOMETER.

Press the button and hold it down for two seconds to reset all functions to zero.

SET: In the setting mode, press to set target values. Press the button and hold it down for two seconds, the meter will continue to add the values even without pressing the **SET** button. Press any button to stop.

HAND: Press to display the function values of moving the handlebar.

FOOT: Press to display the function values of pedaling.

NOTE: The meter is designed to show the function values of HAND and FOOT separate, except the TIME. The Time function will show when both the handlebar and pedaling are moving together.

FUNCTIONS:

HAND: Indicates the meter is working to show the function values of handlebar moving.

FOOT: Indicates the meter is working to show the function values of pedaling.

SPEED: Displays the current speed from zero to 99.9 miles per hour.

TIME: Displays the time from 1 sec. up to 99:59 minutes. Counts down from preset value.

SCAN: Automatically scans each function of DISTANCE, CALORIES, RPM, and ODOMETER in sequence changing every six seconds.

DISTANCE: Displays distance from zero to 99.99 Miles. Counts down from preset value.

CALORIES: Displays the calories burned from zero to 999 Kcal. Counts down from preset value.

The calorie readout is an estimate for an average user. It should be used only as a comparison between workouts on this unit.

RPM: Displays handlebar or crank RPM (revolutions per minute), from zero to 999 rpm.


ODOMETER: Displays the total accumulated distance you have taken from zero to 9999 miles. The total accumulated distance is retained when the meter is turned off, until the batteries are removed.

PRESET VALUES OPERATION:

You can move the handlebar or begin pedaling to power on the meter. This will start the operation of the meter. Or, you can preset the function values for counting down. Stop pedaling for four seconds, the meter will enter setting mode. The meter will go through the input items as follows and allow you to set the function values. Use **SET** button to input the values. Press the **MODE/RESET** button to confirm. Or, just press the **MODE/RESET** button to skip the setting and move on to the next function. If you go past the value of any function, you will just can press the **MODE/RESET** button and hold it down for two seconds to reset all preseted functions to zero, and then preset all functions again. After all of the desired settings are chosen, move the handlebar and/or begin pedaling to start the workout.

Time (1:00 to 99:00) → Distance (0.1 to 99.9 mile) → Calories (1.0 to 999 Kcal)


- **NOTE:** 1. You may preset values for several functions. The preset function values will start to count down. When you complete one of the preset functions, the meter will remind you with an audible alarm for eight seconds. Then the value of this completed function will start to count up, while the other preset functions will continue to count down.
 - 2. The meter will shut off automatically after 4 minutes of inactivity. All function values will be kept. Press the **MODE/RESET** button and hold it down for two seconds to reset all functions to zero.

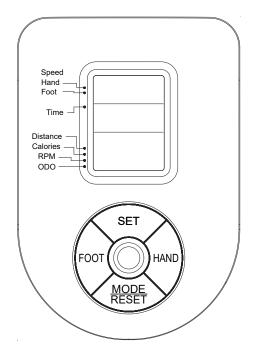

OPERATIONAL INSTRUCTIONS


HOW TO INSTALL AND REPLACE BATTERIES:

- 1. Open the Battery Door on the back of the meter.
- 2. The meter operates with two AAA batteries, the batteries are not included. Refer to the illustration to install or replace the batteries.
- **NOTE:** 1. Do not mix a new battery with an old battery.
 - 2. Use the same type of battery. Do not mix an alkaline battery with another type of battery.
 - 3. Rechargeable batteries are not recommended.
 - 4. Ultimate disposal of battery should be handled according to all state and federal laws and regulations.
 - 5. Do not dispose of batteries in fire.

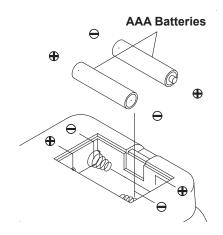

PEDAL LOAD ADJUSTMENT


To increase the load, turn the **TENSION KNOB(32)** clockwise. To decrease the load, turn the **TENSION KNOB(32)** counterclockwise. There are eight levels for the load adjustment.

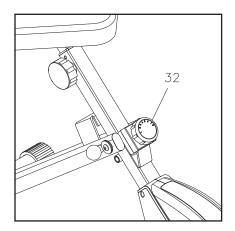

HANDLEBAR LOAD ADJUSTMENT

To increase the load, turn the **HANDLEBAR TENSION KNOB(102)** clockwise.

To decrease the load, turn the **HANDLEBAR TENSION KNOB(102)** counterclockwise.

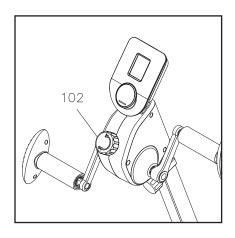


OPERATIONAL INSTRUCTIONS

SEAT ADJUSTMENT


Proper seat adjustment is important.

- Turn the ADJUSTMENT KNOB(99) counterclockwise to loosen, but not remove, then pull the ADJUSTMENT KNOB(99) to release the pin. Slide the SEAT FRAME(5) until the SEAT(26) is at the proper height. Release the ADJUSTMENT KNOB(99) making sure the pin catches in one of the holes of the SEAT FRAME(5) and tighten the ADJUSTMENT KNOB(99).
- 2. Sit on the seat and place your feet on the pedals. You should be able to move through a complete pedal stroke without locking your knees or shifting your hips on the seat. The seat is too close to the pedals if you have more than a slight bend in your knees at the bottom of the pedal stroke. The seat is too far from the pedals if you have to completely straighten your knees at the bottom of the pedal stroke. Refer to the illustration.
- **CAUTION:** 1. Do not attempt to adjust the seat while you are on the **STAMINA® Recumbent Exercise Bike.**
 - 2. Always tighten the **ADJUSTMENT KNOB(99)** after adjusting the seat to a new position.

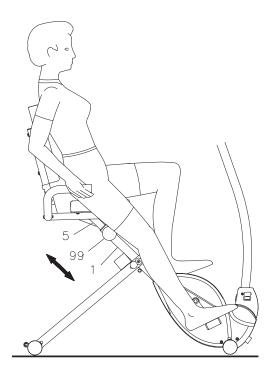


HANDLEBAR ANGLE ADJUSTMENT

Refer to the illustrations below. The angle of the HANDLEBARS(118) can be set to different angles from Position 1 to Position 5. Lift the LEVER(9) up using your right foot, adjust the UPRIGHT(3)/ HANDLEBARS(118) to desired position. Then press the LEVER(9) down to lock the UPRIGHT(3)/ HANDLEBARS(118) in position.

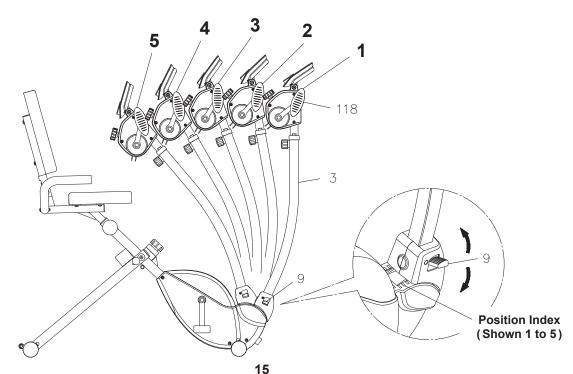

STORAGE

- 1. To store the STAMINA® Recumbent Exercise Bike, simply keep it in a clean dry place.
- 2. To avoid damage to the electronics, remove the batteries before storing the **STAMINA® Recumbent Exercise Bike** for one year or more.
- 3. To move the STAMINA® Recumbent Exercise Bike, hold the HANDRAIL(7) and tilt the STAMINA® Recumbent Exercise Bike onto the WHEELS(23) of the REAR STABILIZER(8).
- 4. The minimum folded dimensions of the **STAMINA® Recumbent Exercise Bike** are approximately 27.3 inches long x 24.8 inches wide x 49.4 inches tall. Please measure your **STAMINA® Recumbent Exercise Bike** if exact dimensions are needed.
 - a. Remove the PULL PIN(60). Fold the BACK CUSHION(27) flat. Insert the PULL PIN(60) back to the BACK SUPPORT(6) for storage.
 - b. Use the LEVER(9) to adjust the UPRIGHT(3) backward to Position 5.
 - c. Remove the BALL PIN(73). Fold the REAR FRAME(2) forward. Insert the BALL PIN(73) into the lower hole in the REAR FRAME(2) after folding. Make sure the BALL PIN(73) goes through the holes on both sides of the REAR FRAME(2) and the tube on the MAIN FRAME(1).

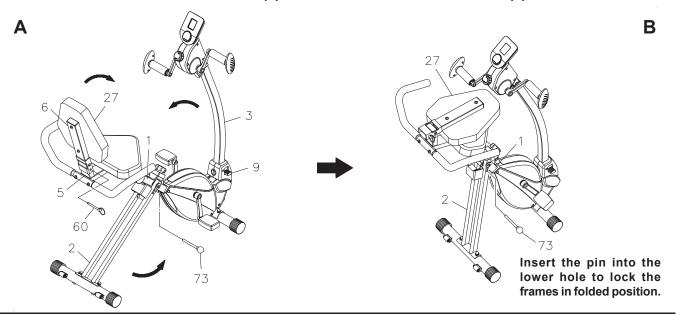

MAINTENANCE

The safety and integrity designed into the **STAMINA®** Recumbent Exercise Bike can only be maintained when the **STAMINA®** Recumbent Exercise Bike is regularly examined for damage and wear. Special attention should be given to the following:

- 1. Adjust the **TENSION KNOB(32)** and **HANDLEBAR TENSION KNOB(102)** to verify that they function properly and the resistance changes.
- 2. Use a wrench to verify that the pedals and handlebars are tightened securely. If tightening is required, remember that the left pedal has left hand threads and is tightened by turning counterclockwise.
- 3. Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Tighten loose nuts and bolts.
- 4. Verify that the **CAUTION LABEL(56)** is in place and easy to read. Call Stamina Products immediately at **1-800-375-7520** for a replacement **CAUTION LABEL(56)** if it is missing or damaged.
- 5. It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
- 6. Worn or damaged components must be replaced immediately or the **STAMINA® Recumbent Exercise Bike** removed from service until repair is made.
- 7. Only Stamina Products supplied components should be used to maintain/repair the **STAMINA® Recumbent Exercise Bike.**
- 8. Keep your **STAMINA® Recumbent Exercise Bike** clean by wiping it off with an absorbent cloth after use.

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

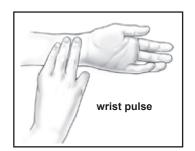

Target Heart Rate Zone Estimated by Age*

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute


^{*} For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: 220 - Age = predicted maximum heart rate

WARM-UP and COOL-DOWN

Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.


Stretching Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

Suggested Stretching Exercises

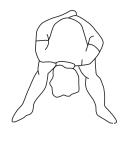


Lower Body Stretch

Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs. DO NOT BOUNCE! When the pull on the back of the legs lessens, gradually try a lower position.

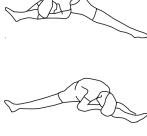

Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds. DO NOT BOUNCE! Do this stretch 10 times. Repeat the stretch with the left leg.

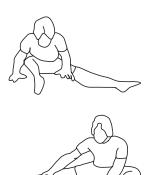

Bent Torso Pulls

While sitting on the floor, have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.



Bent Over Leg Stretch

Stand with feet shoulder-width apart and lean forward as illustrated. Using the arms, **gently** pull the upper body towards the right leg. Let the head hang down. DO NOT BOUNCE! Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

Remember to always check with your physician before starting any exercise program.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

MODEL 15-0340A

WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA. Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 2040 N Alliance Ave, Springfield, Missouri, USA, MO 65803, or email us at customer.care@staminaproducts.com, or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.


NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER. These warranties are not transferable. IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY. If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.

THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

PRODUCT PARTS DRAWING

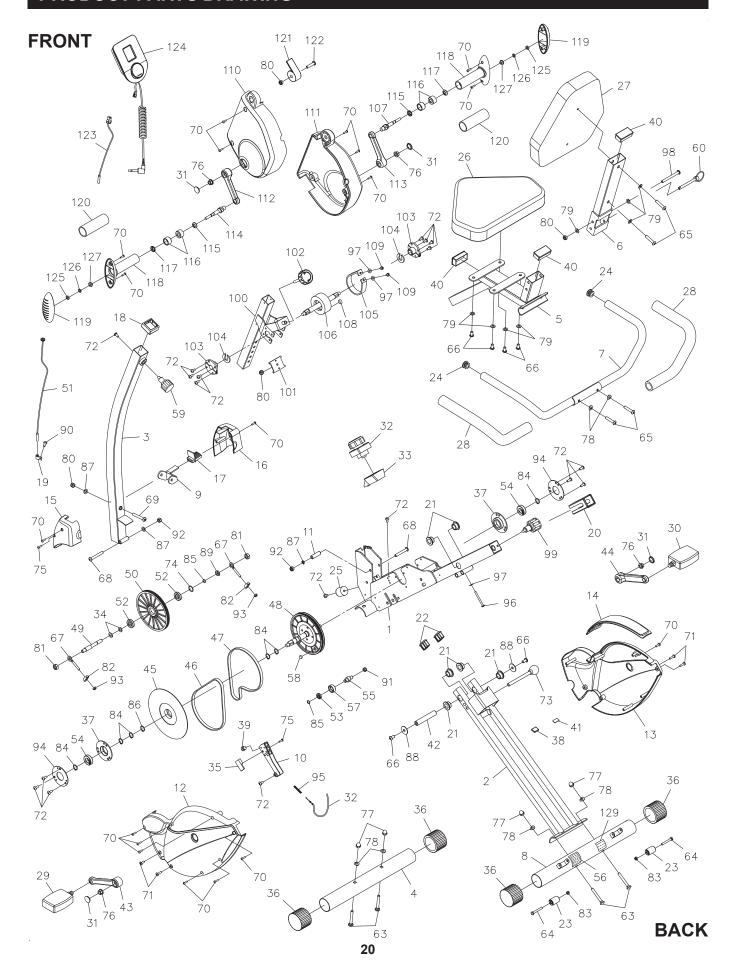

PARTS LIST

PART#	PART NAME	QTY
1	Main Frame	1
2 3	Rear Frame	1
3 4	Upright Front Stabilizer	1 1
5	Seat Frame	i
<u>6</u>	Back Support	1
7 8	Handrail Rear Stabilizer	1 1
9	Lever	1
10	Magnetic Brake	<u>i</u>
11	Sleeve	1
12 13	Left Cover Right Cover	1 1
14	Top Cover	1
15	Left Front Cover	1
16	Right Front Cover	1
17 18	Lever Cover Hollow Cap	1 1
19	Sensor Clip	1
20	Bushing	1
21	Plastic Bushing	6
22 23	Oval Plug (20mm x 40mm) Wheel	2 2 2
24	Round Plug (25mm)	2
25	Bumper	1
26 27	Seat Back Cushion	1 1
28	Foam Grip	2
29	Left Pedal	1
30	Right Pedal	1
31 32	Crank Cap Tension Knob	4 1
33	Tension Knob Housing	1
34	Plastic Washer (M10)	2
35	Guide Block	1
36 37	Endcap Bearing Housing	4 2
38	Protection Pad	1
39	Retaining Plug	1
40	Rectangular Plug (30mm x 60mm) EVA Pad	3
41 42	Shaft	1 1
43	Left Crank	i
44	Right Crank	1
45 46	Magnetic Disc	1
47	V-Ribbed Belt (230J) V-Ribbed Belt (240J)	1 1
48	Pulley w/ Shaft	<u>i</u>
49	Pulley Shaft	1
50 51	Pulley Sensor Wire	1 1
52	Ball Bearing (6000ZZ)	2
53	Ball Bearing (6200ZZ)	1
54	Ball Bearing (6003RS)	2
55 56	Idler Shaft Caution Label	1 1
57	Idler Wheel	i
58	Magnet	1
59	Small Adjustment Knob	1
60 61	Pull Pin Combination Wrench	1 1
62	Allen Wrench (5mm) w/ Screwdriver	1
63	Carriage Bolt (M8 x 1.25 x 65mm)	4
64	Bolt, Hex Head (M6 x 1 x 45mm)	2
65	Bolt, Button Head (M8 x 1.25 x 40mm)	4

21

PARTS LIST

PART#	PART NAME	QTY
66	Bolt, Button Head (M8 x 1.25 x 20mm)	6
67 68	Eye Bolt (M6 x 1) Bolt, Button Head (M8 x 1.25 x 55mm)	2 2
69	Bolt, Button Head (M8 x 1.25 x 68mm)	1
70 71	Screw, Round Head (M4.2 x 16mm) Screw, Round Head (M5 x 20mm)	18 4
72	Bolt, Round Head (M6 x 1 x 12mm)	18
73	Ball Pin	1
74 75	Wave Washer (S10) Screw, Round Head (M4.2 x 25mm)	1 2
76	Flange Nut (M10 x 1.25)	4
77 78	Acorn Nut (M8 x 1.25) Arc Washer (M8)	4 6
79	Washer (M8)	8
80	Nylock Nut (M8 x 1.25)	4
81 82	Nut (M10 x 1.25 x 7mm thick) Tension Bracket	2 2 2 6 2
83	Nylock Nut (M6 x 1)	2
84	C Ring (17mm)	6
85 86	C Ring (10mm) Wave Washer (S17)	1
87	Lock Washer (M8)	3 2
88 89	Large Washer (ø8.2 x ø25 x 2mm Thick) Thin Nut (M10 x 1.25 x 4mm thick)	2 1
90	Screw, Round Washer Head (M4 x 0.6 x 10mm)	1
91	Nylock Nut (M10 x 1.25)	1
92 93	Thin Nut (M8 x 1.25 x 6mm thick) Nut (M6 x 1)	2 2 2
94	Bearing Housing Cover	
95	Spring Samuel Bound Head (M5 v. 55 mars)	1
96 97	Screw, Round Head (M5 x 55mm) Washer (M5)	1 3
98	Bolt, Button Head (M8 x 1.25 x 80mm)	1
99 100	Adjustment Knob Handlebar Post	1 1
101	Pulling Plate	1
102	Handlebar Tension Knob	1
103 104	Shaft Block Snatch Ring	2 2
105	Brake Strap	1
106	Brake Drum	1
107 108	Right Handlebar Shaft Small Magnet	1 1
109	Screw, Round Head (M5 x 0.8 x 12mm)	2
110 111	Left Upper Cover	1 1
112	Right Upper Cover Left Handlebar Crank	1
113	Right Handlebar Crank	1
114 115	Left Handlebar Shaft Ball Bearing w/ big hole	1 2
116	Bearing Housing	4
117	Ball Bearing w/ small hole	2 2 2
118 119	Handlebar Handlebar Cover	2
120	Hand Grip	2
121	Meter Plate	1
122 123	Bolt, Button Head (M8 x 1.25 x 35mm) Upper Sensor Wire	1 1
124	Meter	1
125	Nut (M8 x 1.25)	2 2
126 127	Snap Washer Arc Nut (M8 x 1.25)	2
128	Manual	1
129	Serial Decal	1

TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at **customer.care@staminaproducts. com** or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



ONLINE
CUSTOMER CARE
customer.care@staminaproducts.com
www.staminaproducts.com

PRODUCT REGISTRATION FORM





FAX CUSTOMER CARE Fax: (417) 889-8064



STAMINA PRODUCTS, INC. ATTN: Customer Care 2040 N Alliance Ave, Springfield, MO 65803

Would you like to recieve email information or special offers from Stamina Products? Register at contact.staminaproducts.com

TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to register.staminaproducts.com. Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 2040 N Alliance Ave, Springfield, MO 65803.

Stamina Products, Inc. 2040 N Alliance Ave, Springfield, MO 65803

Place Purchased:	
Date of Purchase:	. Purchase Price:
First Name:	Last Name:
City: State:	Zip Code:
Email Address:	,
	nina Products?*YesNo *If yes, be sure your email address is included about
Detach and	Mail or Fax the Form Above
TO ORDER PARTS	
7-889-8064. The part will be mailed to your address.	duct. To order parts by mail, fill out the sheet below and fa
Detach and	I Mail or Fax the Form Below
	amina Products, Inc. ice Ave, Springfield, MO 65803
Mr./Ms:	
Address:	I "
City: State:	Zip Code:
	per to process the order!
IMPORTANT : We require your phone numb	•
Phone #: ()	. Work Phone #: ()
Phone #: ()	. Work Phone #: ()
Phone #: ()	. Work Phone #: ()
Phone #: ()	. Work Phone #: ()
Phone #: ()	. Work Phone #: ()
Phone #: ()	. Work Phone #: () tion below, make sure you have the correct information. make sure you're ordering the right parts!
Phone #: ()	tion below, make sure you have the correct information. make sure you're ordering the right parts! CRIPTION QUANTITY
Phone #: ()	tion below, make sure you have the correct information. make sure you're ordering the right parts! CRIPTION QUANTITY